

		MODEL G, Z, and Z AIR DINESK INSTALLATION INSTRUCTIONS		4 3 2 1 0 2 Difficulty Level	
WI:		WI-020-2024 Model G, Z, and Z Air Dinesk Installation Instructions			
PRODUCT:		Model G, Z, Z Air	VIN Range:	000001 - Current	REVISION: REV-D
DATE:		April 15, 2026	LABOR RATE:	Aftermarket Installation	

Sliding Dinette Installation:

In certain models and floor plans, Brinkley RV offers an optional dinette table that converts to a desk/ workstation. If not originally equipped with this option from the factory, provided it is an applicable fit, Brinkley owners can have this popular option installed at their expense. The following are detailed instructions for installation of the sliding dinette.

SAFETY:


Service, repair and installation instructions are written specifically for the use of professionally trained technicians, using proper tools in a shop environment. For safety, and to ensure the best results, **only professionally trained technicians** should perform the work described in this document.

Safety is, and should always be observed when performing any type of repair. ANSI (American National Standards Institute) has created a standardized labeling system for different levels of safety and danger. The labels below provide information regarding those levels of danger and should be observed and adhered to at all times.

⚠ CAUTION

The “CAUTION” symbol above is a sign that a procedure has a safety risk involved and may cause personal injury, product, and/or property damage if not performed safely and within the parameters set forth in this document.

Sliding Dinette Parts Kit K108866

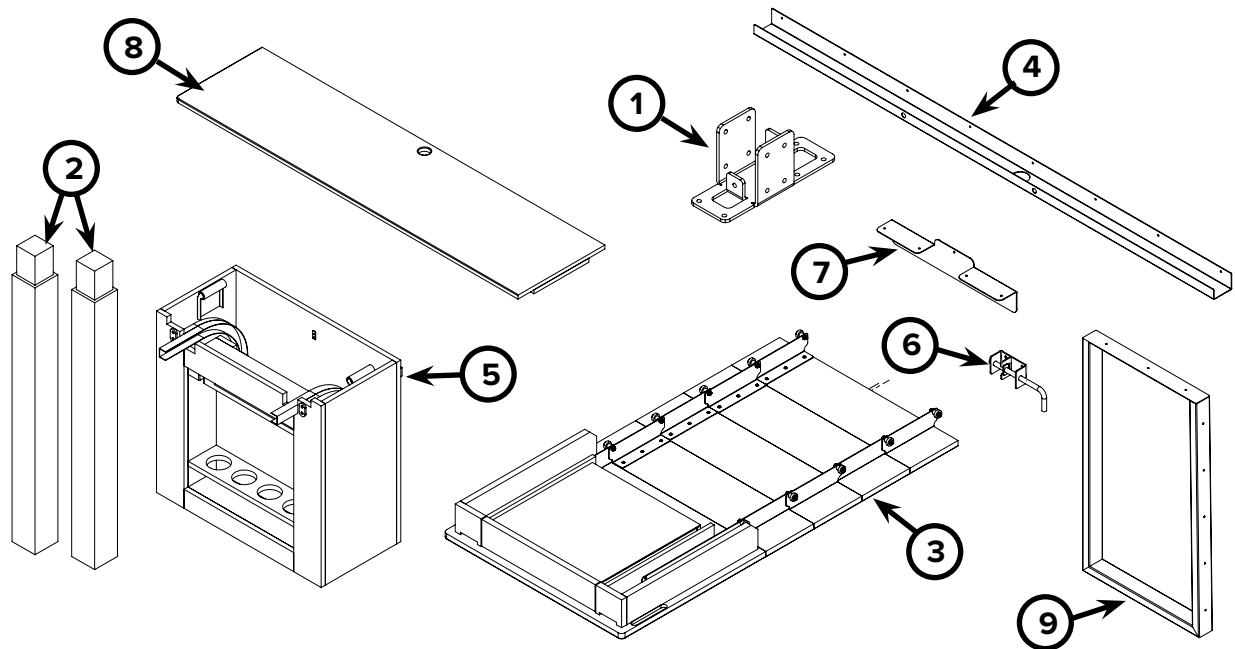

Item	Part Number	Description	Qty
1	108857	LEG BRACKET	2
2	108857	LEG (INCLUDED WITH LEG BRACKET)	2
3	108857	PULLOUT TABLE	1
4	107139	TOP ANGLE BRACKET	1
5	107039	BOX	1
6	107142	LATCH	1
7	107143	METAL STOP	1
8	107041	COUNTERTOP	1
9	107141	METAL LEG	1
N/S	103729	SEAMTAPE 1" LILO SPLIT EMPRESS	6'

Fasteners			
Item	Part #	Description	Qty
#10	101361	FASTENER SCREW 8 X 5/8 2000 BLACK ROUND WASHER QUAD DEEP THREAD TYPE 17	19
#11	101356	FASTENER SCREW 8 X 3/4 2000 BLACK PAN QUAD	34
#12	101328	FASTENER SCREW 10 X 1 1/4 2000 BLACK PAN QUAD TYPE A	8
#13	104394	FASTENER SCREW 8 X 1 3/4 3019 GRAY ROUND WASHER QUAD 2/3 DEEP THREAD TYPE 17	9
#14	101897	FASTENER SCREW 8 X 2 2000 BLACK PAN QUAD TYPE A	5

Required Tools

- Measuring Tape
- Screw gun with #2 square drive bit



⚠ CAUTION

Always wear Personal Protection Equipment (PPE), such as eye protection, ear protection, gloves, and possibly a full face shield depending on the nature of the task to be performed.

WORK INSTRUCTIONS:

1. READ AND UNDERSTAND ALL INSTRUCTIONS PRIOR TO BEGINNING WORK.


2. Remove original dinette from slide-out (Figure 1 and Figure 2):

- Remove seat base and wall mounted back cushion
- Remove table top from wall bracket
- Remove wall bracket
- Remove chair retaining brackets



3. Install the legs onto the pull-out table (Figure 3):

- Attach the leg braces to the legs using the leg braces, legs, and twenty-two (22) #11 M8 X 3/4" wood screws.
- Install the legs onto the table by attaching the leg braces on the outside corners of the table using twelve (12) #11 M8 X 3/4" wood screws.

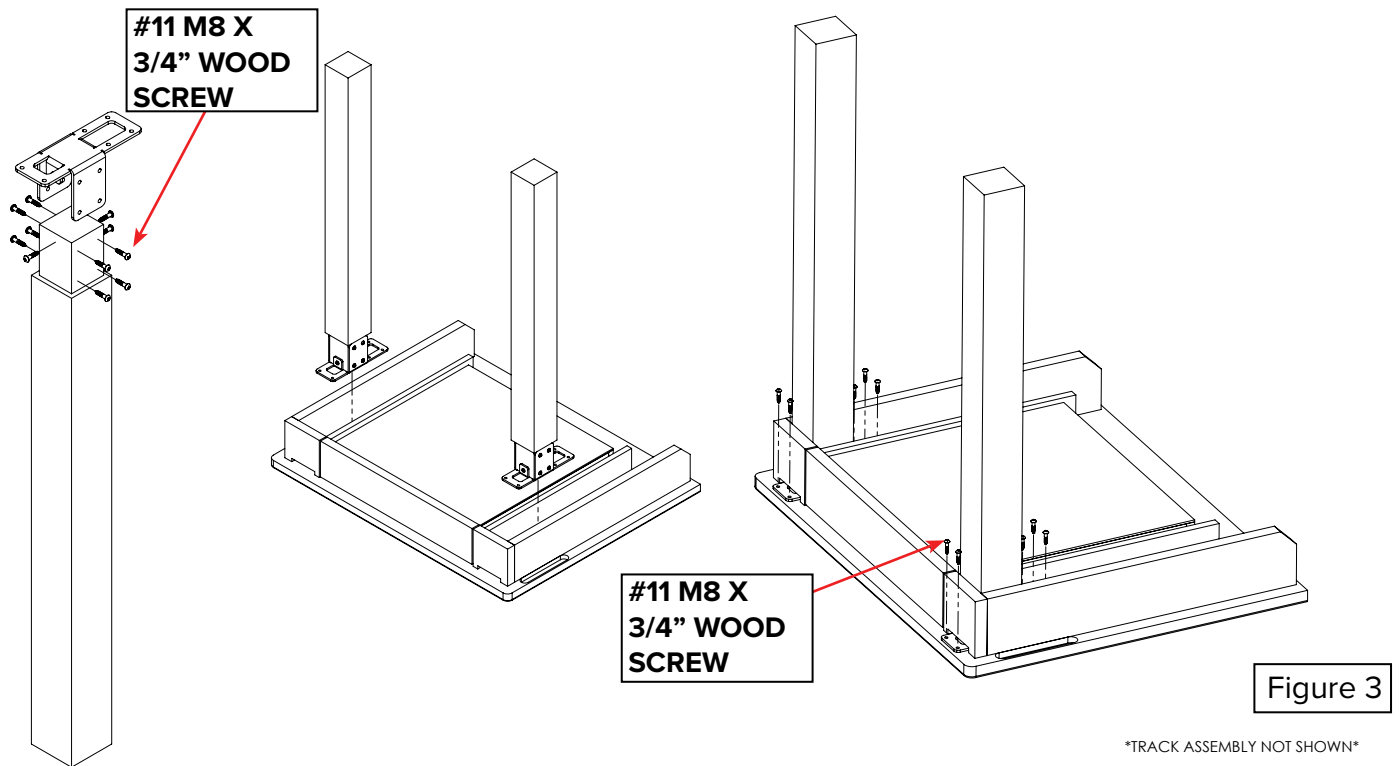


4. Measure from the floor up 27.5", and mark the wall for installation of the top angle bracket (Figure 4 and Figure 5).




5. Position the top angle bracket against the left slide-out wall, then, align the top edge with the 27.5" marks on the wall (Figure 6 and Figure 7).
6. Install the top angle bracket using eight (8) #12 M10 x 1-1/4" wood screws (Figure 7). Once installed, use a clean shop rag to wipe the top angle bracket down completely.



7. Install the box on the top angle bracket (Figure 8). Be sure the top angle bracket is installed in the groove of the interlocking track on the back of the box (Figure 9). The box should slide smoothly side-to-side on the top angle bracket.

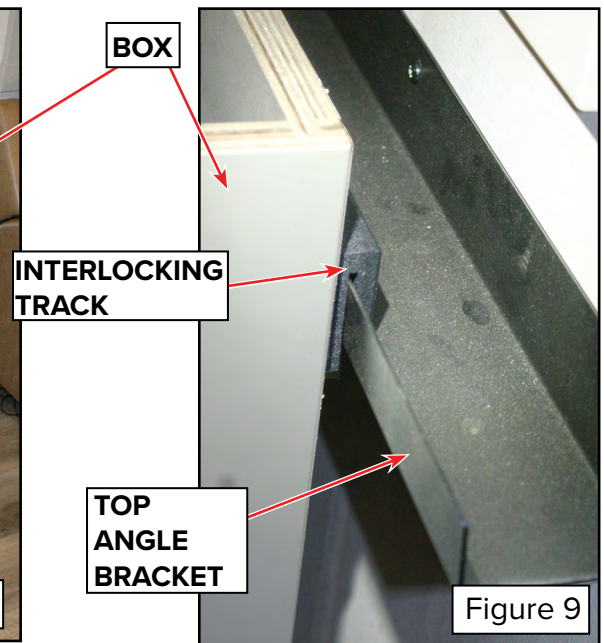


8. Install latch on the box: carefully align the latch on the side of the box for proper insertion into the corresponding holes on the top angle bracket. Secure with three (3) #10 M8 X 5/8" wood screws (Figure 10).
9. Install the table by inserting the rollers into the roller tracks inside the box (Figure 11). Roll the length of the roller tracks to make sure it operates smoothly.

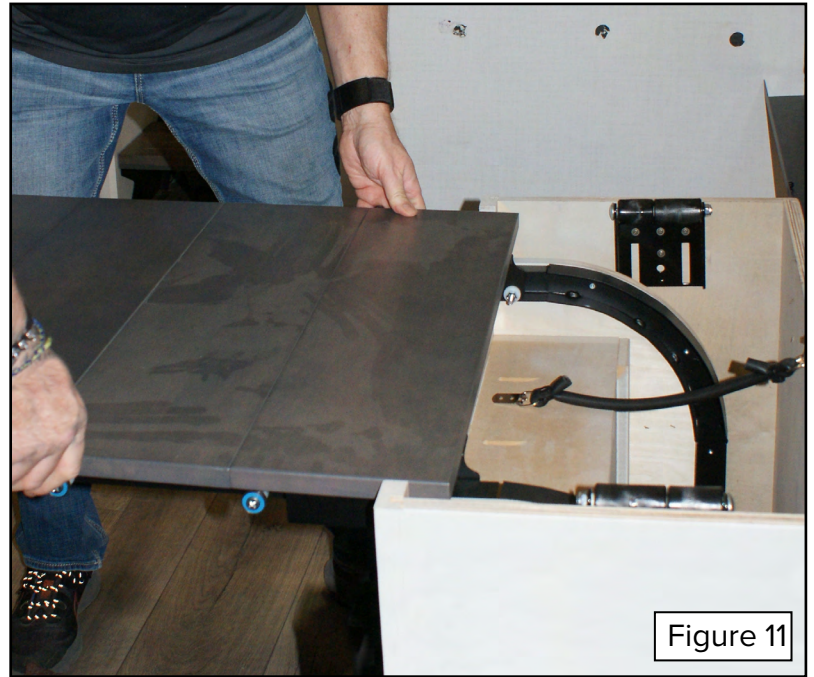

10. Install the metal stop plate on the back edge of the table. Use four (4) #10 M8 X 5/8" wood screws attached from below (Figure 12). Be certain the metal stop plate is against the back of the leaf so it pulls out straight.



11. Install bungee cord on the back of the stop plate using two (2) #10 M8 X 5/8" wood screws (Figure 13).
12. Install countertop: **NOTE:** Countertop should fit under window fascia:
 - Position the counter top completely against the left wall with the cleats above the top angle bracket.
 - Place the right leg under the countertop, approximately 1/2" from right edge of countertop, and secure from below with three (3) #10 M8 X 5/8" wood screws (Figure 14a and Figure 14b).

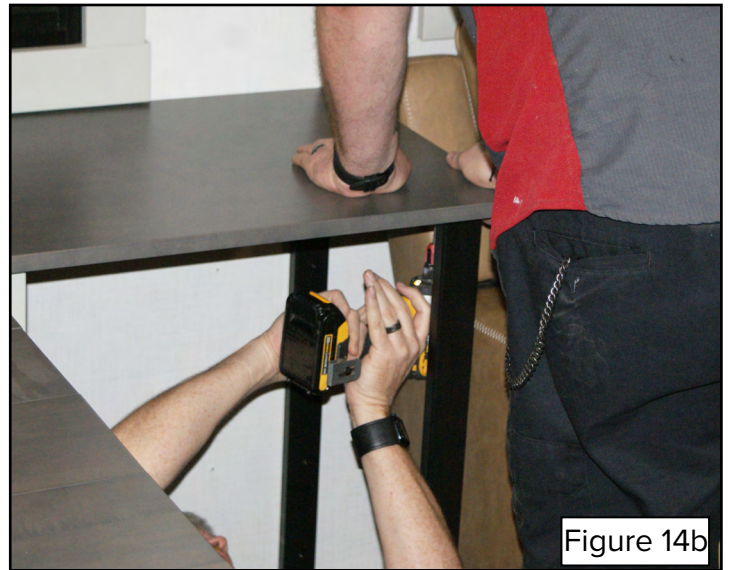

13. Secure countertop to the left wall and back wall using nine (9) #13 M8 X 1-3/4" self tapping screws (Figure 15).
14. Secure the right leg to back wall using five (5) #14 M8 X 2" self tapping screws (Figures 16a and 16b).



15. Clean and cover holes in wall from original dinette using matching Brinkley seam tape (part number 103729 - not shown).
16. When installation is complete, pull the latch and test for smooth operation and movement of the dinette box and table top (Figure 17a).
17. Test extension and retraction of the table top for smooth operation (Figures 17b and c).

