



MODEL G-Z-Z AIR QUEEN BED CONVERSION KIT INSTALLATION INSTRUCTIONS

24
3
2
1
0Difficulty
Level**WI:** WI-049-2026 Model G-Z-Z Air Queen Bed Conversion Kit Install**PRODUCT:** Model G-Z-Z Air**VIN Range:** 000001 - Current**REVISION:** REV-C**DATE:** July 6, 2026**LABOR RATE:** Aftermarket Installation

Queen Bed Conversion Kits

On some units equipped from the factory with a king size bed in the main bedroom, a kit is available to convert the bed platform to a queen size bed and add nightstands on either side of the mattress.

Parts Information - For Units Made Prior to Model Year 2027

Model G Queen Bed Conversion Kit (Prior to MY2027 Units) #K107755

Part Number	Description	Qty
104470	NIGHTSTAND BOX 5 3/4 X 10 1/2 X 34 RHF COASTAL CAROLINA SLATE	1
104471	NIGHTSTAND BOX 5 3/4 X 10 1/2 X 34 LHF COASTAL CAROLINA SLATE	1
104687	BUMPER RUBBER 13/16 X 13/16 X 19/64 H VINYL W/ADHESIVE BACK	8
100901	FASTENER SCREW 8 X 1 3/4 PLAIN ROUND WASHER QUAD DEEP THREAD	4
126878	BEDSPREAD QUEEN IMPORT KIT SOUTHBEND LINEN 1 SPREAD 2 SHAMS	1

Model Z (All Floor Plans Except 3600) Queen Bed Conversion Kit (Prior to MY2027 Units) #K107686

Part Number	Description	Qty
103501	NIGHTSTAND BOX 5 3/4 X 10 1/2 X 34 RHF COASTAL CAROLINA SLATE	1
103502	NIGHTSTAND BOX 5 3/4 X 10 1/2 X 34 LHF COASTAL CAROLINA SLATE	1
104687	BUMPER RUBBER 13/16 X 13/16 X 19/64 H VINYL W/ADHESIVE BACK	8
100901	FASTENER SCREW 8 X 1 3/4 PLAIN ROUND WASHER QUAD DEEP THREAD	4

Model Z (3600 Only) Queen Bed Conversion Kit (Prior to MY2027 Units) #K125833

Part Number	Description	Qty
118307	NIGHTSTAND BOX 10 3/4 X 10 1/2 X 34 3/4 LHF COASTAL CAROLINA SLATE MAPLE	1
118308	NIGHTSTAND BOX 10 3/4 X 10 1/2 X 34 3/4 RHF COASTAL CAROLINA SLATE MAPLE	1
104687	BUMPER RUBBER 13/16 X 13/16 X 19/64 H VINYL W/ADHESIVE BACK	8
100901	FASTENER SCREW 8 X 1 3/4 PLAIN ROUND WASHER QUAD DEEP THREAD	4

Model Z Air Queen Bed Conversion Kit (Prior to MY2027 Units) #K114711

Part Number	Description	Qty
109954	NIGHTSTAND BOX 5 3/4 X 8 1/2 X 34 3/4 LHF MAPLE CAROLINA SLATE	1
109955	NIGHTSTAND BOX 5 3/4 X 8 1/2 X 34 3/4 RHF MAPLE CAROLINA SLATE	1
104687	BUMPER RUBBER 13/16 X 13/16 X 19/64 H VINYL W/ADHESIVE BACK	8
100901	FASTENER SCREW 8 X 1 3/4 PLAIN ROUND WASHER QUAD DEEP THREAD	4

Work Instructions: WI-049-2026 Model G-Z-Z Air Queen Bed Conversion Kit Install

Revision Level: REV-C

Product: Model G-Z-Z Air

Page 1 of 5



Parts Information - For Model Year 2027 Units

Model G Queen Bed Conversion Kit (MY2027 Units) #K132203

Part Number	Description	Qty
126506	NIGHTSTAND BOX 5 3/4 X 10 1/2 X 34 RHF SUNSET BLUFF	1
126507	NIGHTSTAND BOX 5 3/4 X 10 1/2 X 34 LHF SUNSET BLUFF	1
104687	BUMPER RUBBER 13/16 X 13/16 X 19/64 H VINYL W/ADHESIVE BACK	8
100901	FASTENER SCREW 8 X 1 3/4 PLAIN ROUND WASHER QUAD DEEP THREAD	4

Model Z (All Floor Plans Except 3600) Queen Bed Conversion Kit (MY2027 Units) #K132204

Part Number	Description	Qty
126446	NIGHTSTAND BOX 5 3/4 X 10 1/2 X 34 RHF SUNSET BLUFF	1
126447	NIGHTSTAND BOX 5 3/4 X 10 1/2 X 34 LHF SUNSET BLUFF	1
104687	BUMPER RUBBER 13/16 X 13/16 X 19/64 H VINYL W/ADHESIVE BACK	8
100901	FASTENER SCREW 8 X 1 3/4 PLAIN ROUND WASHER QUAD DEEP THREAD	4

Model Z (3600 Only) Queen Bed Conversion Kit (MY2027 Units) #K132198

Part Number	Description	Qty
126707	NIGHTSTAND BOX 10 3/4 X 10 1/2 X 34 3/4 LHF SUNSET BLUFF	1
126708	NIGHTSTAND BOX 10 3/4 X 10 1/2 X 34 3/4 RHF SUNSET BLUFF	1
104687	BUMPER RUBBER 13/16 X 13/16 X 19/64 H VINYL W/ADHESIVE BACK	8
100901	FASTENER SCREW 8 X 1 3/4 PLAIN ROUND WASHER QUAD DEEP THREAD	4

Model Z Air Queen Bed Conversion Kit (MY2027 Units) #K132200

Part Number	Description	Qty
128402	NIGHTSTAND BOX 5 3/4 X 8 1/2 X 34 3/4 LHF SUNSET BLUFF	1
128403	NIGHTSTAND BOX 5 3/4 X 8 1/2 X 34 3/4 RHF SUNSET BLUFF	1
104687	BUMPER RUBBER 13/16 X 13/16 X 19/64 H VINYL W/ADHESIVE BACK	8
100901	FASTENER SCREW 8 X 1 3/4 PLAIN ROUND WASHER QUAD DEEP THREAD	4



Work Instructions: WI-049-2026 Model G-Z-Z Air Queen Bed Conversion Kit Install

Revision Level: REV-C

Product: Model G-Z-Z Air

Page 2 of 5

TOOLS REQUIRED:

1. Tape Measure
2. Cordless Drill/Screw Gun
3. #2 Square Drive Bit
4. Jig Saw
5. Belt or Palm Sander
6. Pencil/Pen (Not pictured)
7. Safety Glasses (Not pictured)



⚠ CAUTION


Always wear Personal Protection Equipment (PPE), such as eye protection, ear protection, gloves and/or possibly a full face shield, depending on the nature of the task to be performed.

NOTE: READ AND UNDERSTAND ALL INSTRUCTIONS PRIOR TO BEGINNING WORK.

NOTE: All images in this instruction are to illustrate the process. Your specific unit may vary slightly, but the process remains the same.

INSTALLATION:


1. Remove the current king size mattress from the bed platform and take it out of the unit (Figure 1).

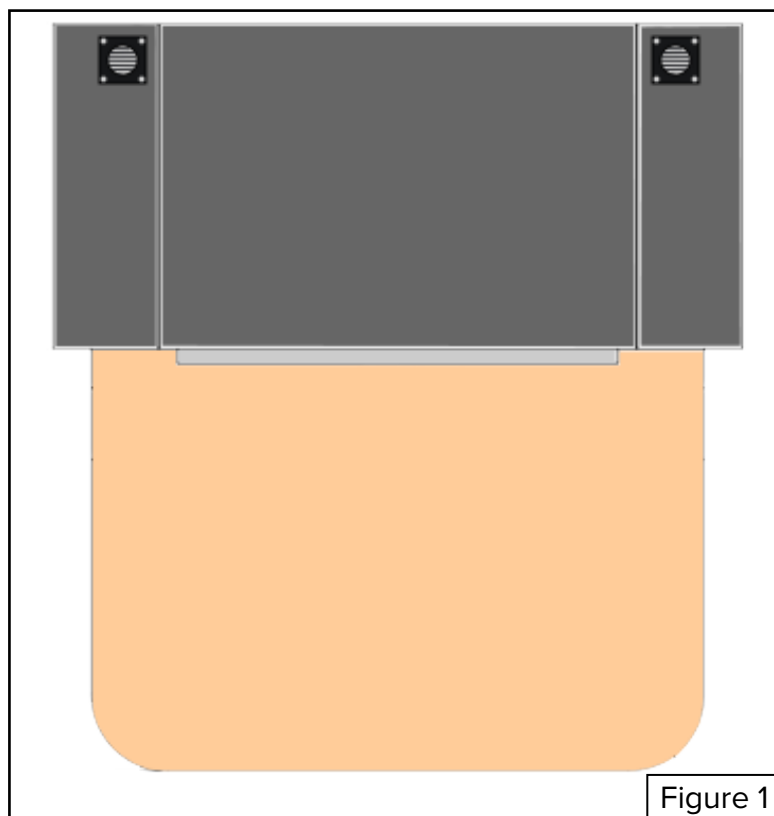

2. Bed Base Air Vents

Option 1: Remove Air Vents (this will allow the nightstands to sit flush with the bed base)


- Using the screw gun and a #2 square drive bit, remove the four (4) screws (Figure 2A) securing each vent cover (Figure 2B) to the bed base (Figure 2C). There should be two vents on top of the bed base. These will not be reinstalled and can be discarded.

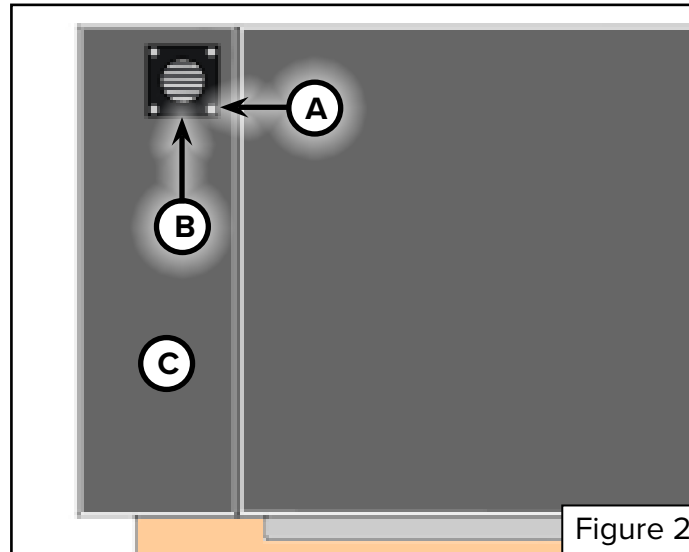

Option 2: Leave Air Vents (this will cause the nightstands to float above the bed base and keep airflow next to the mattress)



Prepare the nightstand assemblies for installation.

- Flip the nightstand assembly over (Figure 3).
- Measure seven (7) inches from the back edge of the nightstand and mark a line (Figure 3A) across the nightstand base. The front edge of the nightstand will have a lip on it (Figure 3B).
- Install four (4) rubber bumpers (P/N 104687) on the bottom of the nightstand (Figure 3C). Peel the paper backing from the adhesive side of the bumper and then press the bumper onto the base of the nightstand.


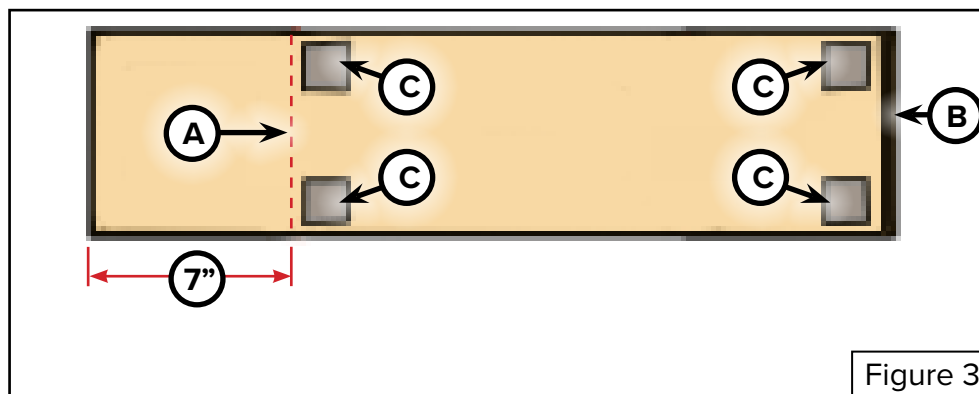


NOTE: If installing on a Model G, skip to step 5 below. For all other units, continue with step 3.

3. Measure in from the edge of the plywood bed base (Figure 4A) four (4) inches from the left and right hand sides and mark a line (Figure 4B). You will also need to mark the new radius line (Figure 4C) to cut.
4. Using the jig saw, cut along the lines you made in step 3 (Figure 5). If the edges of the plywood are rough after cutting, use a belt or palm sander to smooth them over and remove any splinters.

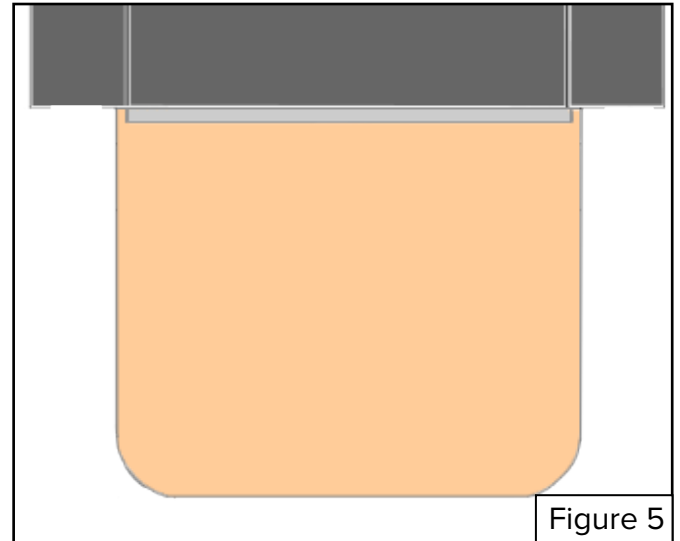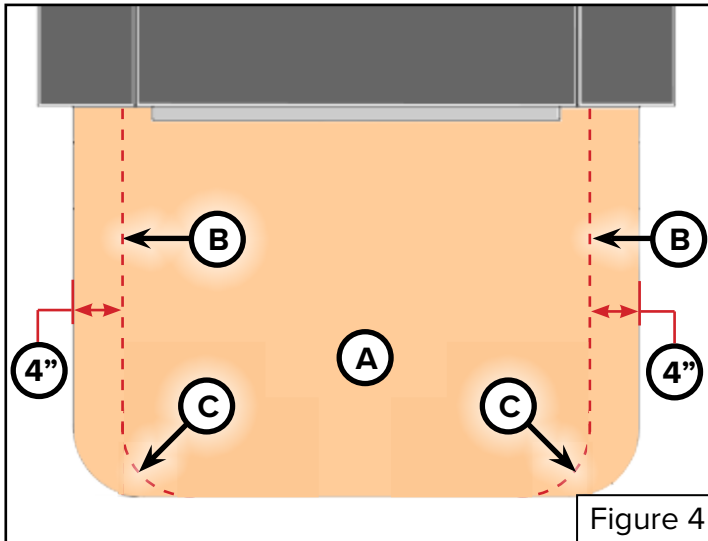

5. Slide the nightstands (Figure 6A) into place on the bed base. The lip on the lower front edge of the nightstand assembly (Figure 6B) should overhang the front edge of the bed base.
6. With the nightstand in place, open the lid of the nightstand (Figure 7A). Using the screw gun, the #2 square drive bit, and two (2) #8 x 1 3/4" washer head screws (P/N 100901) (Figure 7B), secure the nightstand to the bed base. Repeat this step for the other nightstand.

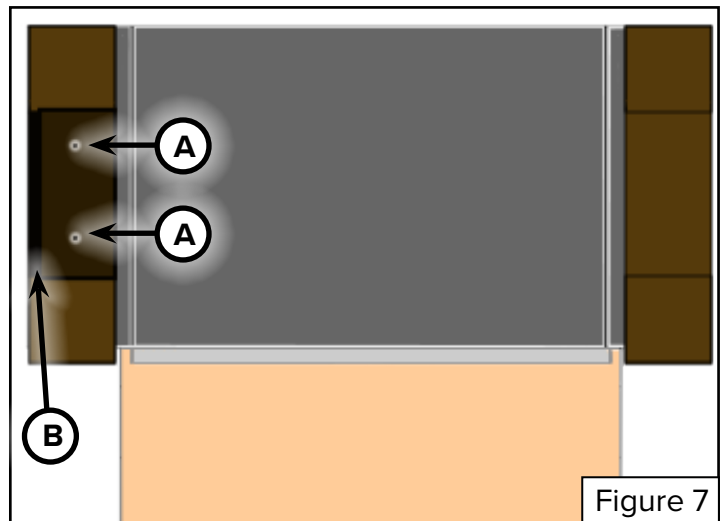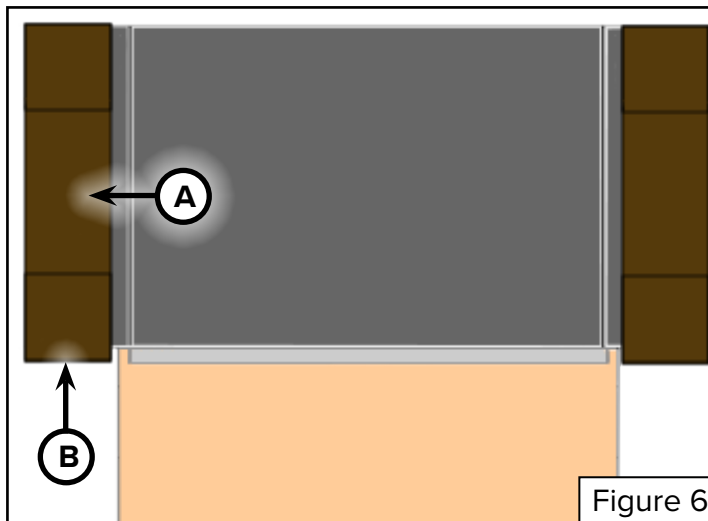

7. Clean off the bed base and floor around the bed base to remove any saw dust, splinters, or other debris.
8. Place your new queen size mattress in place on top of the bed base and in between the nightstands.
9. Installation complete.

