

		MODEL G 4150 and 4155 FLOOR PLANS SOFA SECUREMENT FOR TRAVEL INSTRUCTIONS			4 3 2 1 0 0 Difficulty Level	
AU:		AU-006-2026 Model G 4150 and 4155 Sofa Securement Instructions				
PRODUCT:		Model G 4150 and 4155	VIN Range:	000001 - Current	REVISION:	REV-A
DATE:		April 20, 2026	LABOR RATE:	No Labor Rate		

Instruction Overview

Model G 4150 and 4155 floor plans require specific orientation of the L-sofa end section to allow the slide-outs to be closed for transit. The following directions demonstate this securement procedure.

Safety:

Safety is and should always be observed when performing any type of repair or installation. ANSI (American National Standards Institute) has created a standardized labeling system for different levels of safety and danger. The labels below provides information regarding those levels of danger, and should be observed and adhered to at all times.

⚠ CAUTION

The “CAUTION” symbol above is a sign that a procedure has a safety risk involved and may cause personal injury, product and/or property damage if not performed safely and within the parameters set forth in this document.

⚠ CAUTION

CAUTION: Always wear Personal Protection Equipment (PPE), such as eye protection, ear protection, gloves, and possibly a full face shield depending on the nature of the task to be performed.

TOOLS REQUIRED:




No tools are required for this procedure.

WORK INSTRUCTIONS:

1. READ AND UNDERSTAND ALL INSTRUCTIONS PRIOR TO BEGINNING WORK.
2. Unplug the power cord behind the aisle end recliner section of the L-sofa and lift to release it from the brackets holding it to the next sofa section (Figure 1a). Rotate it forward (Figure 1b).




3. Locate the release lever for the center support foot (Figure 2a) under the sofa end section. Pull the release lever and rotate the center support foot outward (downward) until it locks into position (felt feet facing down - Figure 2b).

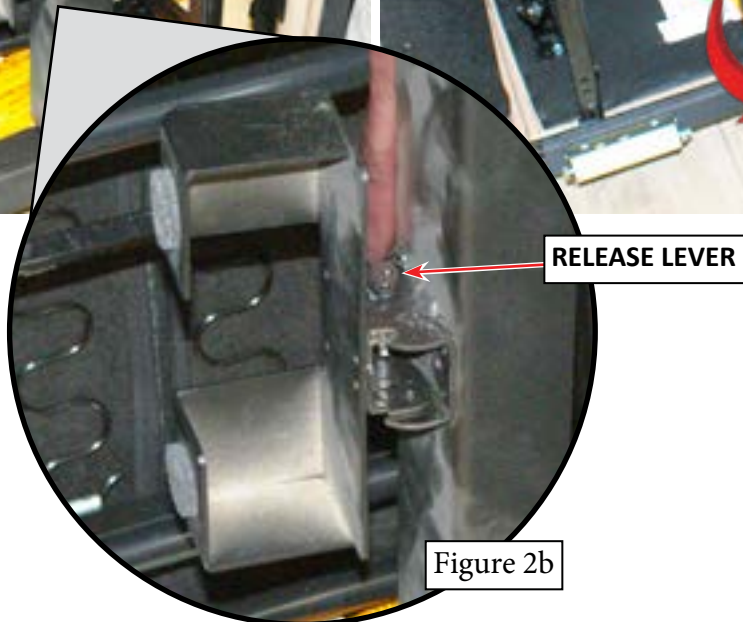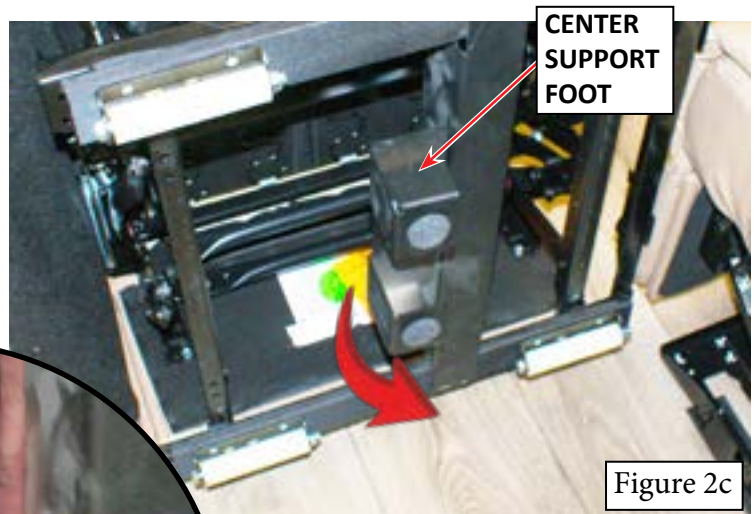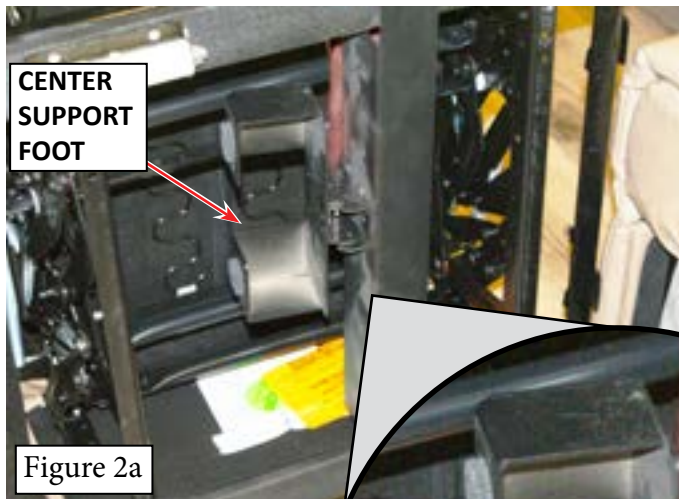

4. Place the sofa end section upright on the center support foot and rotate it so it is in front of and facing the existing sofa (Figure 3).



5. Insert the plastic sofa guard cover (Figure 4a) onto the sofa brackets on the open end of the removed sofa section (Figure 4b and 4c).

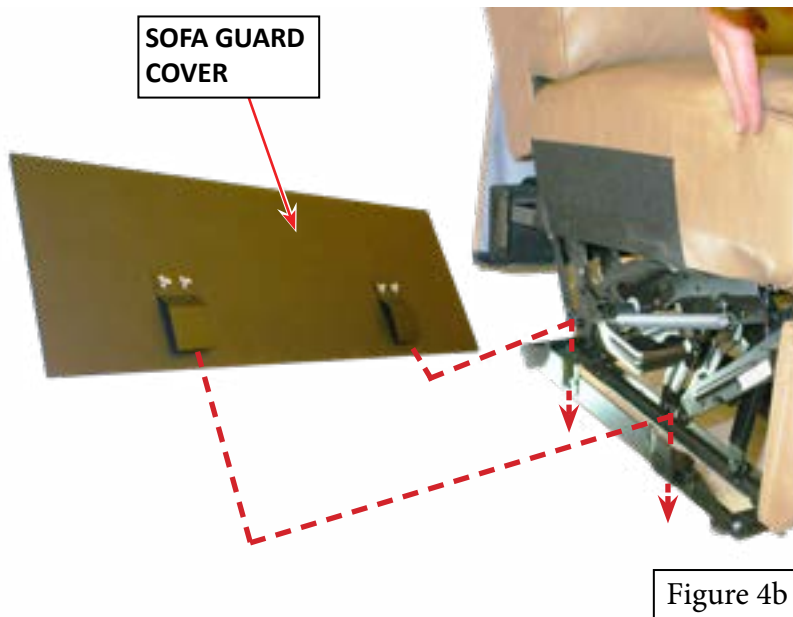

⚠ CAUTION

CAUTION! DO NOT proceed to steps 6, 7 and 8 without installing the Sofa Guard Cover onto the loose sofa section as shown! Failure to do so may cause product and/or property damage!

6. Fully retract the off-door-side slide-out (Figure 5).



7. Place the sofa sectional end against the L-sofa (Figure 6).



8. Fully retract the door-side slide-out (Figure 7). The loose sofa section is held in position between the opposing sofas.
9. End of process; the living room furniture is ready for travel.

